
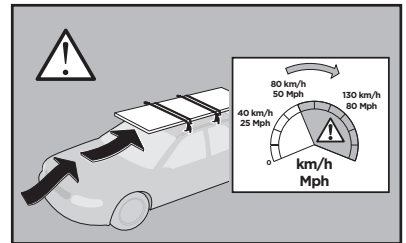
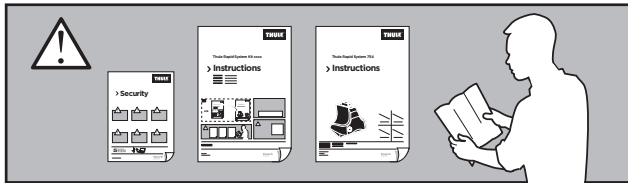
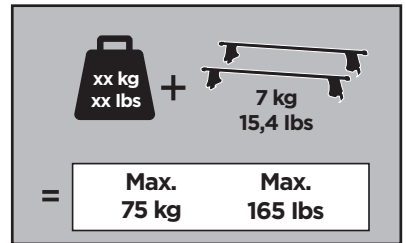


# Thule Rapid System Kit 1673

# > Instructions

**VOLVO V60**, 5-dr Estate, 11-18 / \*14-18 (Without railing)

\*North America

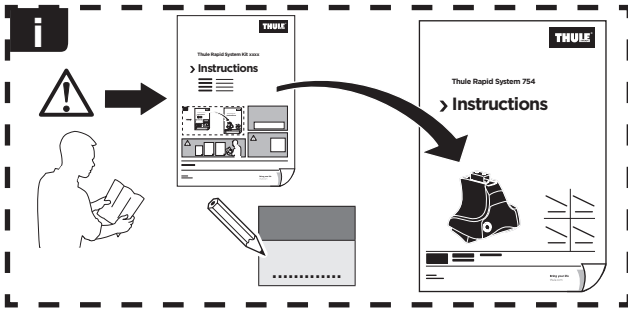

ISO 11154-E




- 07 x2
- 74 x1
- 75 x1



- 1104 x1
- 1105 x1
- 1119 x1
- 1120 x1





x1



x1

# 1


	X (scale)	X (mm)	X (inch)
<b>VOLVO V60</b> , 5-dr Estate, 11-18 / *14-18 (W/o railing)	<b>42</b>	<b>1071</b>	<b>42 1/8</b>

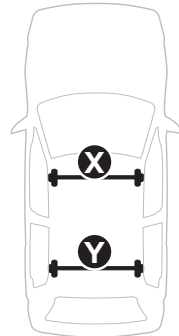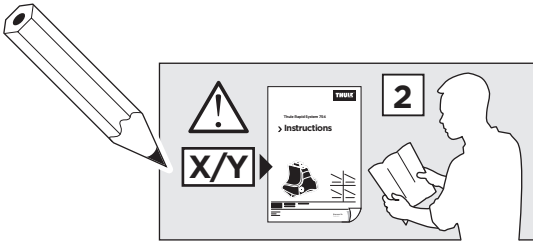


	Y (scale)	Y (mm)	Y (inch)
<b>VOLVO V60</b> , 5-dr Estate, 11-18 / *14-18 (W/o railing)	<b>36</b>	<b>1011</b>	<b>39 3/4</b>

**2**

**VOLVO V60**, 5-dr Estate, 11-18 / \*14-18 (Without railing)

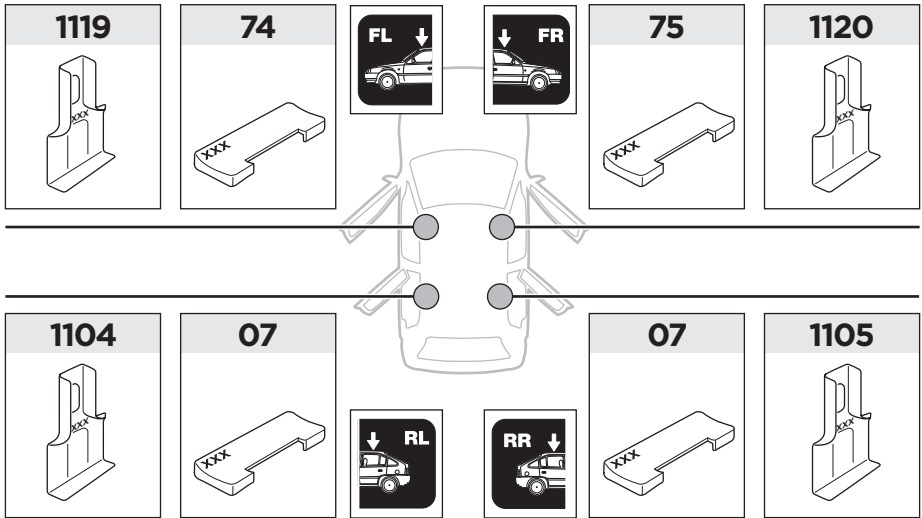

**3**

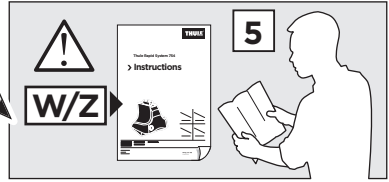

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>VOLVO V60</b> , 5-dr Estate, 11-18 / *14-18 (W/o railing)	<b>200</b>	<b>770</b>	<b>7 <sup>7</sup>/<sub>8</sub></b>	<b>30 <sup>3</sup>/<sub>8</sub></b>

