

# Thule Rapid System Kit 1325





# > Instructions

**BMW 5-Series**, 4-dr Sedan, 04-09

**BMW 5-Series**, 5-dr Touring, 04-09 (without railing)

**BMW 5-Series**, 5-dr Wagon, \*04-10 (without railing)

\*North America

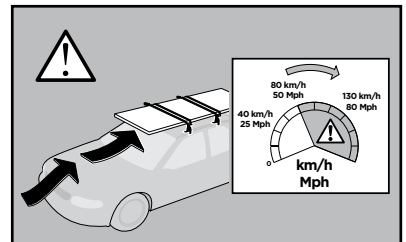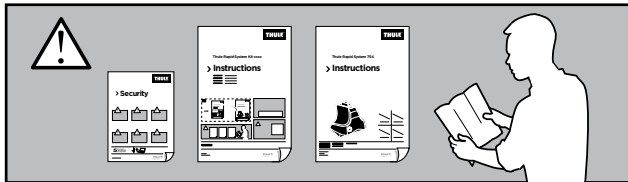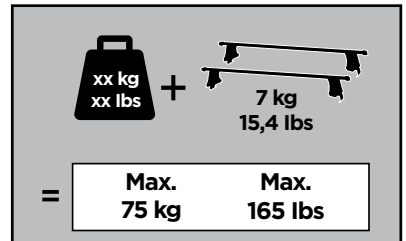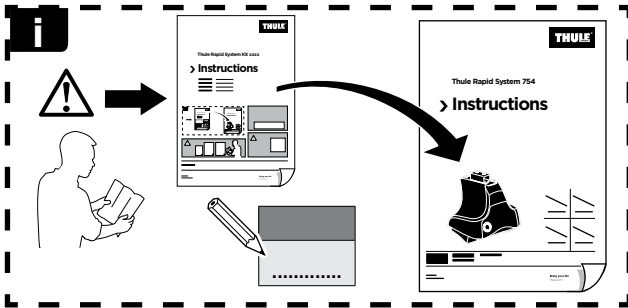

ISO 11154-E

**141325**


C.20120525  
519-1325-04

**Bring your life**

thule.com



137 x4




591 x2



595 x2





x1



x1

# 1

	X (scale)	X (mm)	X (inch)
<b>BMW 5-Series, 4-dr Sedan, 04-09</b>	<b>36,5</b>	<b>1016</b>	<b>40</b>
<b>BMW 5-Series, 5-dr Touring, 04-09 (without railing)</b>	<b>36,5</b>	<b>1016</b>	<b>40</b>
<b>BMW 5-Series, 5-dr Wagon, *04-10 (without railing)</b>	<b>36,5</b>	<b>1016</b>	<b>40</b>

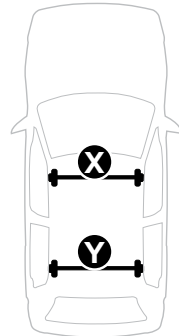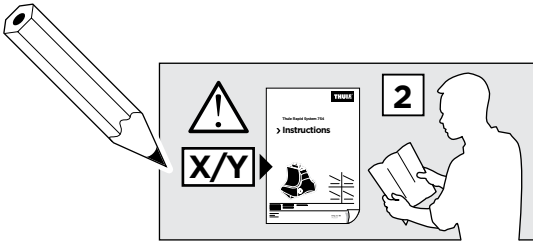



	Y (scale)	Y (mm)	Y (inch)
<b>BMW 5-Series, 4-dr Sedan, 04-09</b>	<b>36</b>	<b>1011</b>	<b>39 <sup>3</sup>/<sub>4</sub></b>
<b>BMW 5-Series, 5-dr Touring, 04-09 (without railing)</b>	<b>34</b>	<b>991</b>	<b>39</b>
<b>BMW 5-Series, 5-dr Wagon, *04-10 (without railing)</b>	<b>34</b>	<b>991</b>	<b>39</b>


# 2

**BMW 5-Series**, 4-dr Sedan, 04-09

**BMW 5-Series**, 5-dr Touring, 04-09 (without railing)

**BMW 5-Series**, 5-dr Wagon, \*04-10 (without railing)

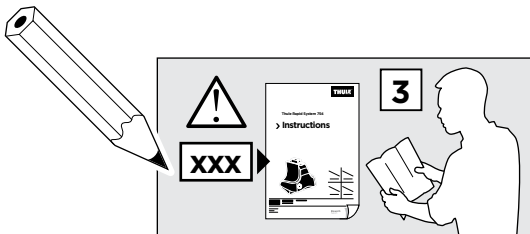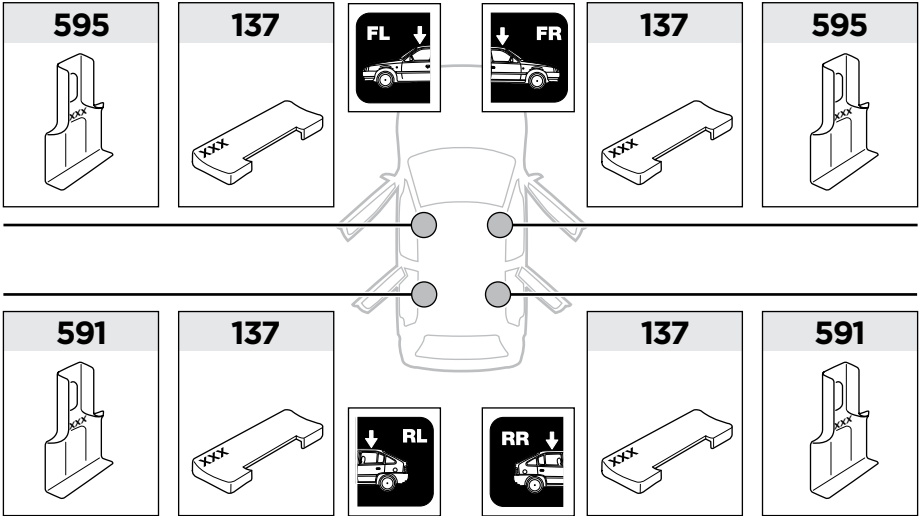

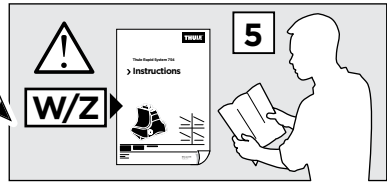**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>BMW 5-Series, 4-dr Sedan, 04-09</b>	<b>270</b>	<b>750</b>	<b>10 <sup>5</sup>/<sub>8</sub></b>	<b>29 <sup>1</sup>/<sub>2</sub></b>
<b>BMW 5-Series, 5-dr Touring, 04-09 (without railing)</b>	<b>270</b>	<b>700</b>	<b>10 <sup>5</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>
<b>BMW 5-Series, 5-dr Wagon, *04-10 (without railing)</b>	<b>270</b>	<b>700</b>	<b>10 <sup>5</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

