
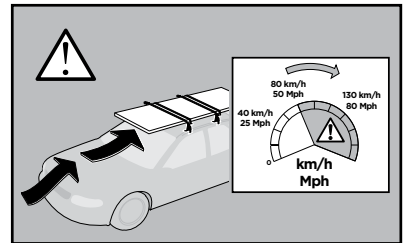
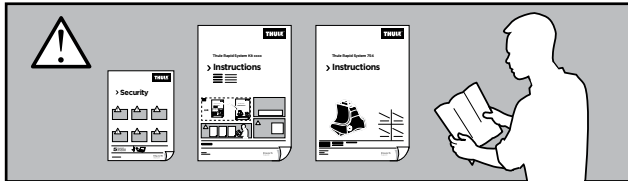
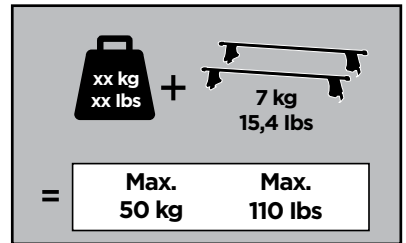


# Thule Rapid System Kit 1471

# > Instructions

HYUNDAI i10, 5-dr Hatchback, 08-

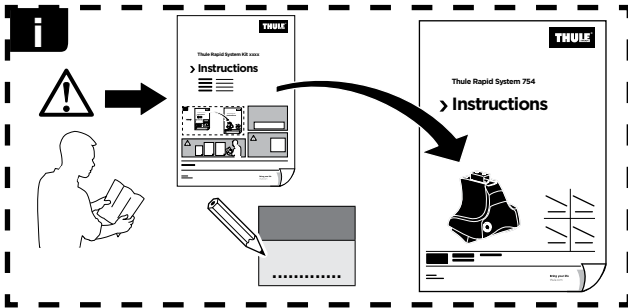

ISO 11154-E


141471

C.20121015  
519-1471-01


Bring your life  
thule.com




120 x1



121 x1



137 x2




829 x2



x1





954 x2



x1

1


	X (scale)	X (mm)	X (inch)
HYUNDAI i10, 5-dr Hatchback, 08-	30,5	956	37 <sup>5</sup> / <sub>8</sub>

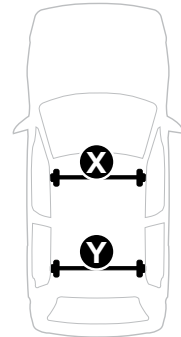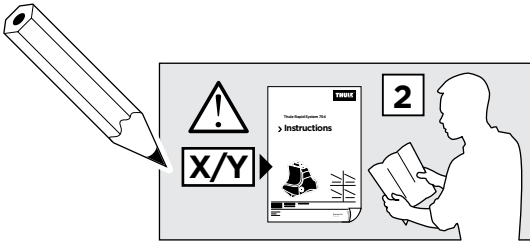


	Y (scale)	Y (mm)	Y (inch)
HYUNDAI i10, 5-dr Hatchback, 08-	26,5	916	36 <sup>1</sup> / <sub>8</sub>

**2**

**HYUNDAI i10**, 5-dr Hatchback, 08-

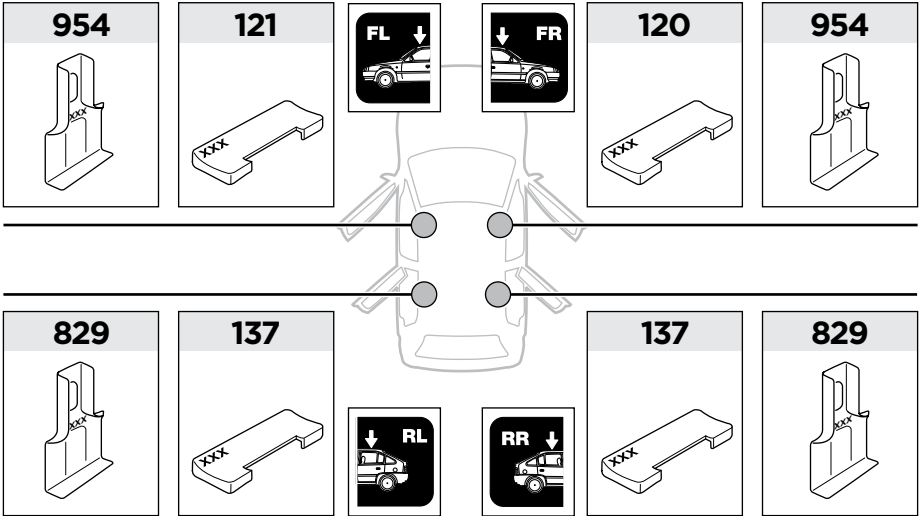

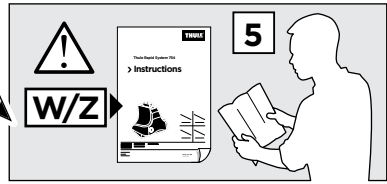**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>HYUNDAI i10</b> , 5-dr Hatchback, 08-	<b>210</b>	<b>700</b>	<b>8 1/4</b>	<b>27 1/2</b>

