




## Thule XT Kit 3139


# > Instructions

- OPEL Vivaro**, 4-dr Van, 15-
- OPEL Vivaro**, 5-dr Bus, 15-
- RENAULT Trafic**, 4-dr Van, 15-
- RENAULT Trafic**, 5-dr Bus, 15-

This kit is only for vehicles with fixpoint mounting.

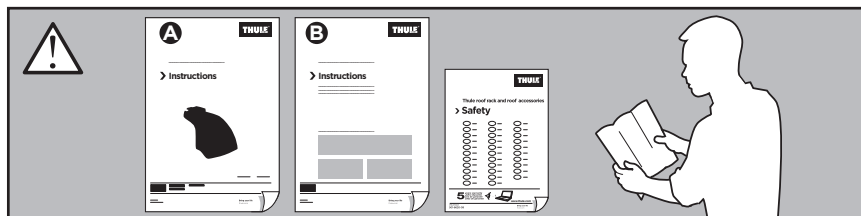

	+					5 kg 11 lbs =	<b>Max.</b> 100 kg / 220 lbs
	+					9 kg 20 lbs =	<b>Max.</b> 150 kg / 330 lbs
	+					12 kg 26 lbs =	<b>Max.</b> 200 kg / 440 lbs



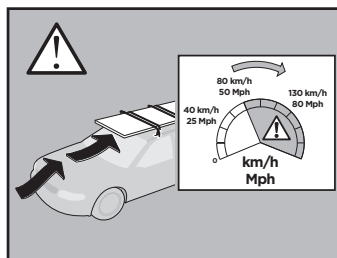


ISO 11154-E


183139

C.20150406  
509-3139-02


Bring your life  
thule.com

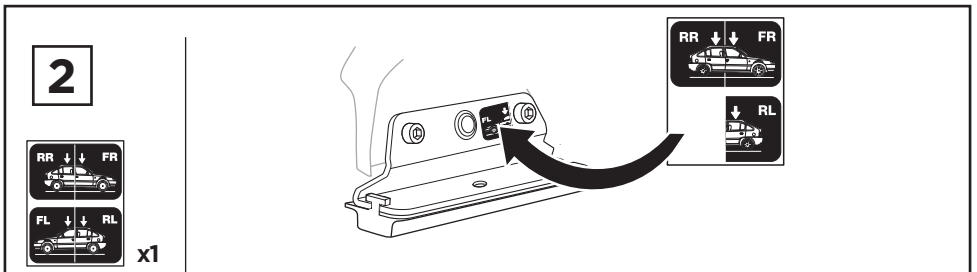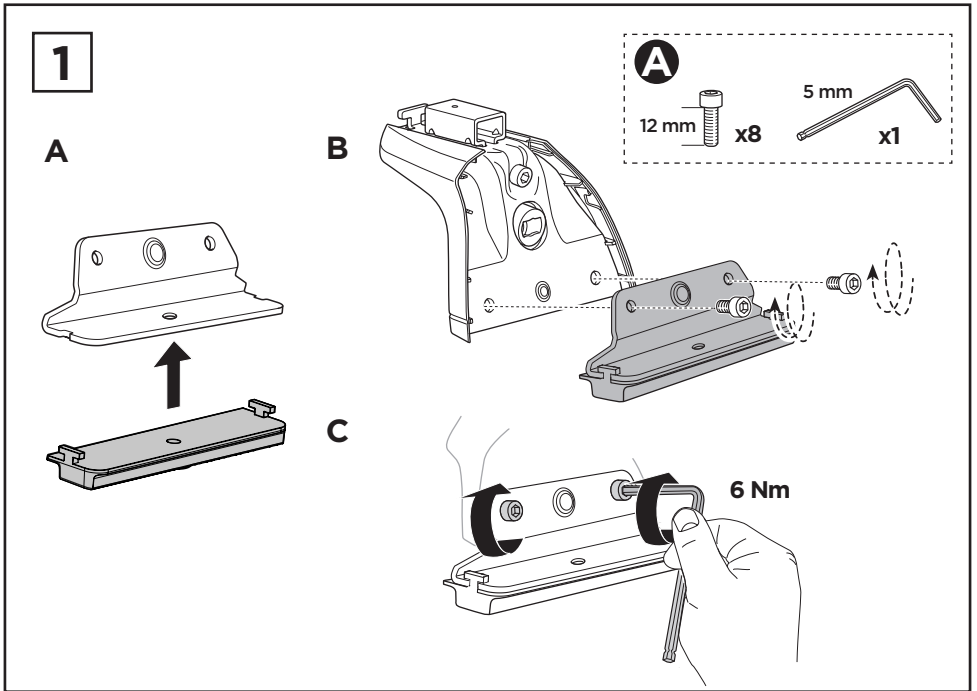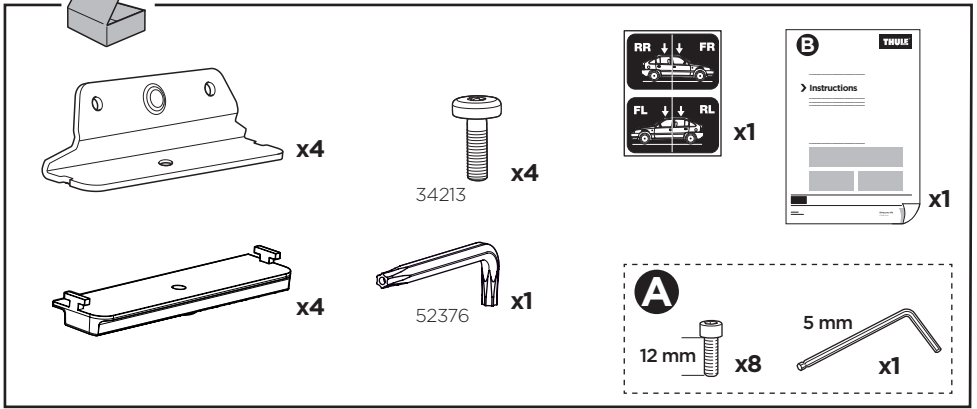



3

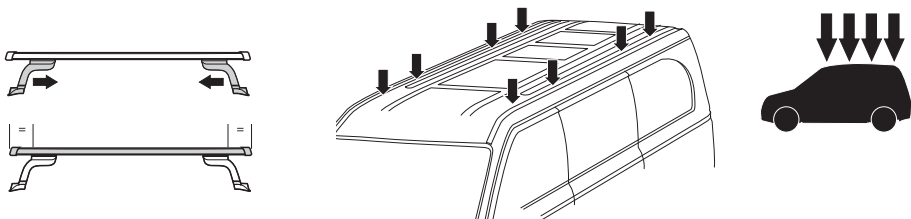

A

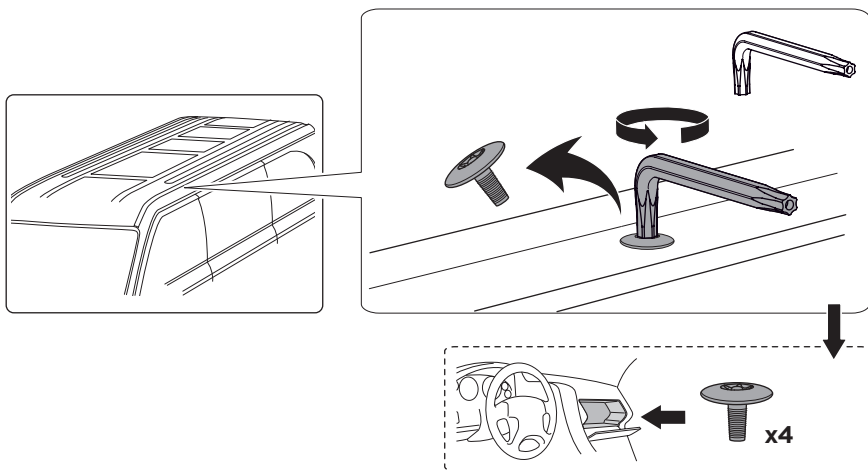

B

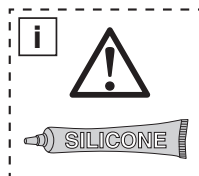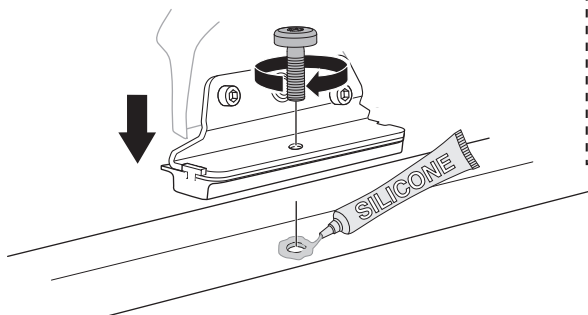


5


A

5 mm

x1




A


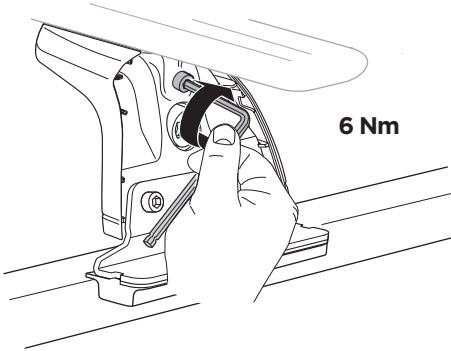


6 Nm


B

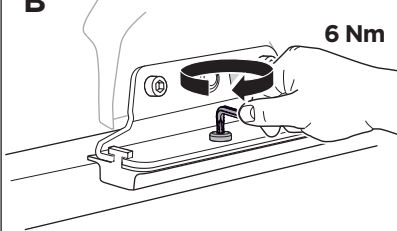

6 Nm

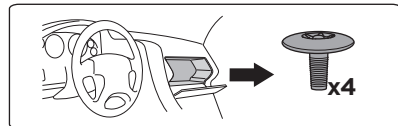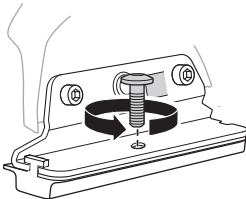

x4

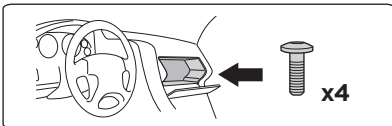

x4

