
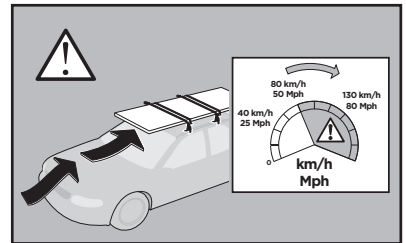
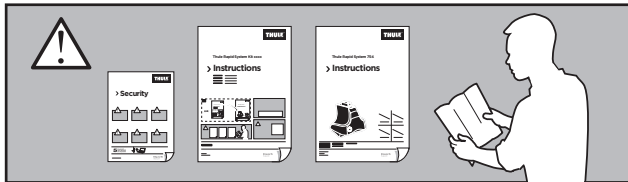
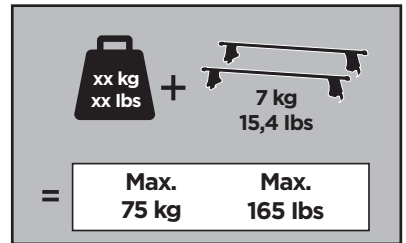


# Thule Rapid System Kit 1017

# > Instructions

**PEUGEOT 306**, 3-dr Hatchback, 94-00

**PEUGEOT 306**, 5-dr Hatchback, 93-00

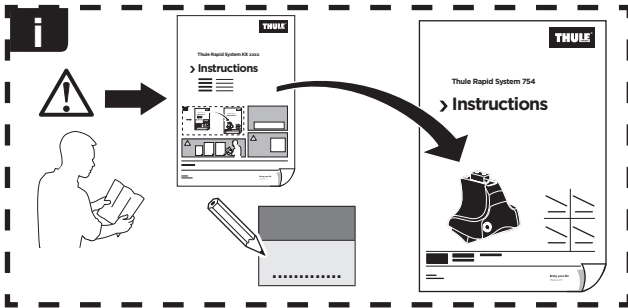



ISO 11154-E

141017


C.20130107  
519-1017-01

Bring your life

thule.com

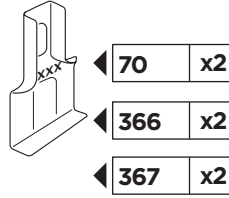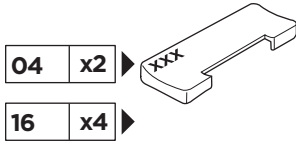



x1



x1



1

	X (scale)	X (mm)	X (inch)
<b>PEUGEOT 306</b> , 3-dr Hatchback, 94-00	23,5	886	34 <sup>7</sup> / <sub>8</sub>
<b>PEUGEOT 306</b> , 5-dr Hatchback, 93-00	23,5	886	34 <sup>7</sup> / <sub>8</sub>

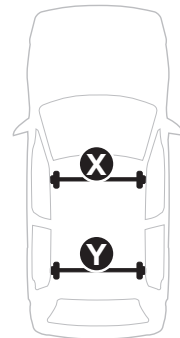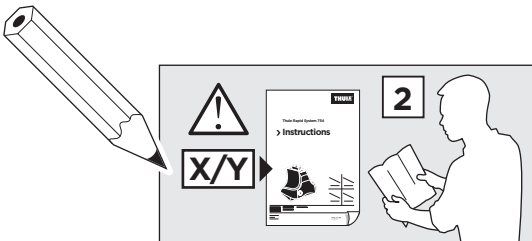


	Y (scale)	Y (mm)	Y (inch)
<b>PEUGEOT 306</b> , 3-dr Hatchback, 94-00	29,5	946	37 <sup>1</sup> / <sub>4</sub>
<b>PEUGEOT 306</b> , 5-dr Hatchback, 93-00	21,5	866	34 <sup>1</sup> / <sub>8</sub>


2

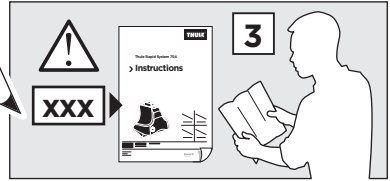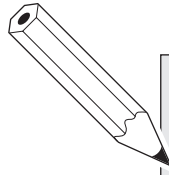



PEUGEOT 306, 3-dr Hatchback, 94-00

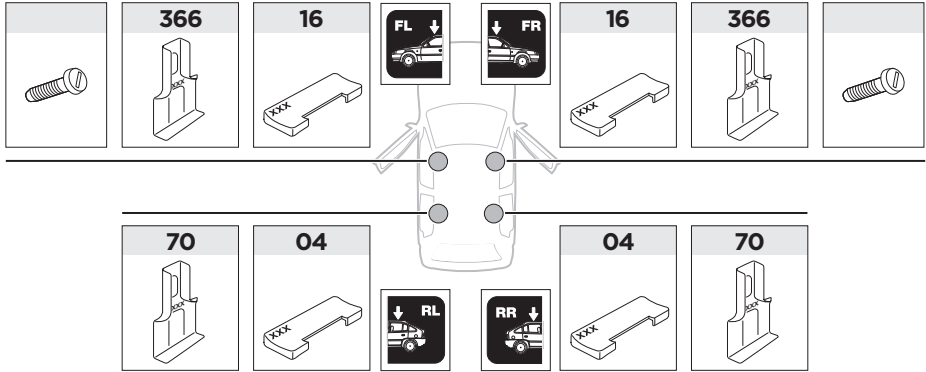



PEUGEOT 306, 5-dr Hatchback, 93-00

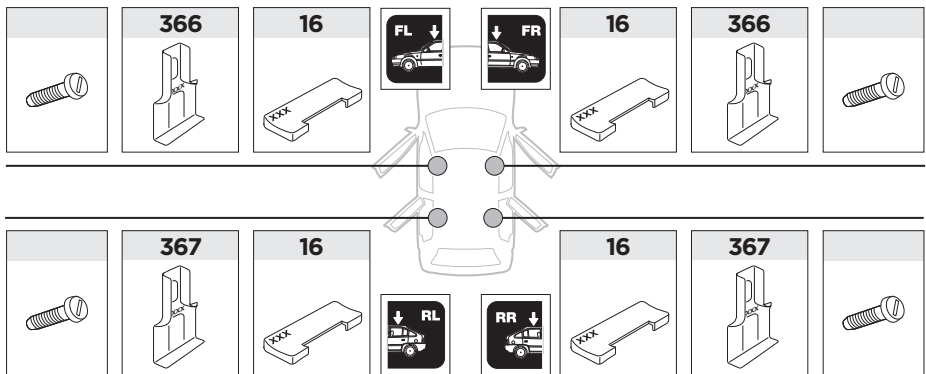

3

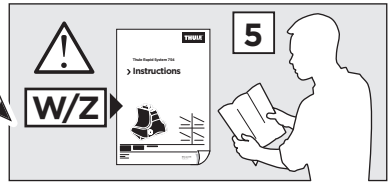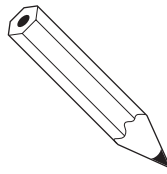

**PEUGEOT 306, 3-dr Hatchback, 94-00**

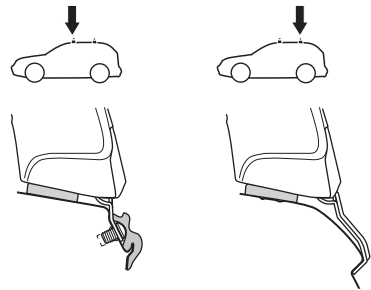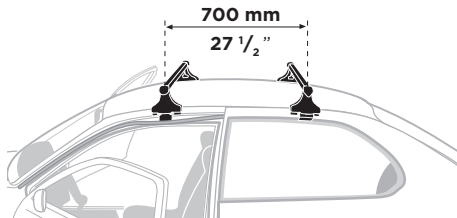

**PEUGEOT 306, 5-dr Hatchback, 93-00**

